

MICRO MARKET

CPU

REPLACEMENT GUIDE

—

- » (For customers) Follow these instructions to replace your CPU in your kiosk. Once swapped, please send back the defective unit along with all original wires within 15 business days, or you will be billed full price for the unit.

If you have any questions or require assistance in performing the CPU swap, please contact Parlevel Support at (210)200-8873 (Option 1)

RMA includes:

- CPU
- Antennas (2x)
- Power Supply

What you will need:

- Phillips Head Screwdriver
- Mini Flathead Screwdriver
- Cable Tie Cutter
- 11/32 Socket (Optional)
- Key to Access Bottom Cabinet



1. Power off the kiosk completely, and then use the Phillips screwdriver to unscrew the two screws that secure the back panel of the kiosk. Once removed, slide the back door up and out to access the CPU.



2. The CPU's power is provided by the green power connector piece located on top of the CPU. The mini flathead screwdriver will be used to disconnect the power cable.




3. Remove all remaining cables and antennae that are plugged into the CPU.

4. Once the power supply, antennas, and cables have been unplugged, carefully slide the mounting bracket up and out to swap out the CPU.

5. Use the screwdriver or the 11/32 socket to unfasten the 4 screws and nuts on the bracket to remove the computer.



6. Place the defective unit aside and line up the replacement CPU with the black pieces on the bracket. The screwdriver or 11/32 socket will then be used to reattach the four screws and nuts. Once secure, carefully slide the mounting bracket back into place in the kiosk back panel.

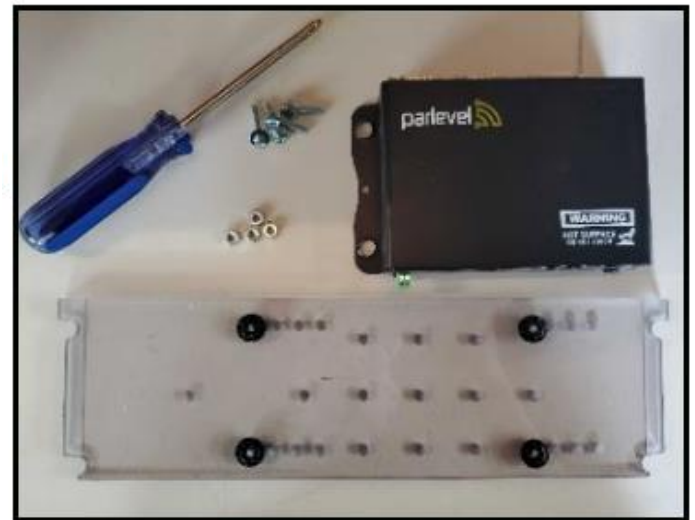

7. Next will be to swap the old power supply with the replacement supply provided in the RMA. This will require access to the bottom cabinet of the kiosk. Find the green power connector piece and open the cabinet door to follow the cable from the CPU in the top half to the bottom, which will lead to the power brick and power strip. We recommend removing the cash box on the bill validator to better access the power supply.



8. Please note the power supply cable may be zip tied to an adhesive mounting pad. Take your cable tie cutter to cut the zip ties holding the cable in place.

9. The power brick is held in place by velcro or double sided tape. Be extra careful when attempting to take it out.

10. Swap out the power supply with the replacement supply sent with the RMA.

11. Run the end of the cable with the green connector piece to the top half of the kiosk to plug into the CPU. Use your mini screwdriver to screw it into place.



Use the following legend to connect the remaining cables into the CPU:

BLACK - Bezel (CC reader) Cable - connects to green connector piece in bottom cabinet

WHITE - USB Extension Cable

RED - Barcode Scanner

BLUE - Camera

YELLOW - Fingerprint Reader

GREEN - Coinco USB - MDB Converter

ORANGE - Touch Screen Cable - connects to monitor

