

Cassette Loading Procedures for the F53, F56 and Arca1000

1. To remove the cassette from the dispenser, you **MUST** push the green button on the front of the cassette to release it.



2. Grasping the front of the cassette, pull it out until the green handle on the top of the cassette is visible. Grasp the green handle and continue removing the cassette from the dispenser.



3. Carry cassette by the green handle to flat, stable surface.




4. Push green button on the front of the cassette to release the lid.



5. Open the cassette lid and lift the green plate at the rear of the cassette as indicated.



6. Pull the cassette pressure plate at the front of the cassette all the way up and flip it into a vertical position as indicated.

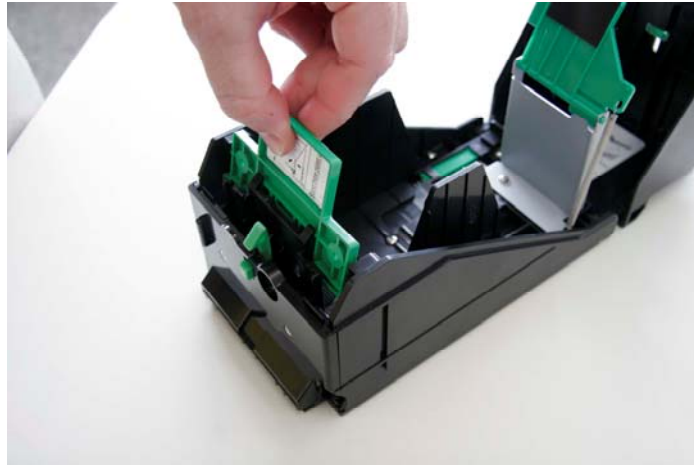

7. Grasp a stack of 50-100 notes and ensure they are perfectly aligned so that no edges protrude from the stack on any side and there is a clean leading edge as indicated below.





8. The following images indicate improper alignment with bills protruding the edges.



9. Place the stack into the cassette as indicated with the notes entering the front end of the cassette first.



10. Place the next stack of 50-100 with the opposite side face up in the same manner.



11. Continue placing stacks, with the opposite side of the note facing up for each stack.


12. When the cassette has reached capacity, flip the rear plate back into position.



13. Lift the front pressure plate, flip it down and gently release it until it rests on the stack of notes.



14. Close the cassette.

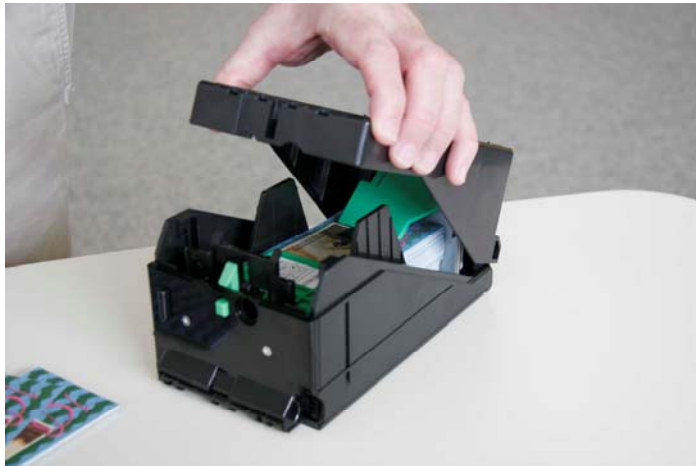

15. Return the cassette to the appropriate position in the dispenser and push until it locks into place