

ReadyTouch Serial Scale (Ariva-S-mini)



Equipment

- Scale
- Scale Display



Setup

1. Remove the scale from the box.
2. Connect the yellow Ethernet cable to the "COM" port on the scale.
3. Connect the Power adapter.
4. The display is already connected – leave the back Disp port empty.
5. Place the scale on a flat surface near the cash drawers.



ReadyTouch Serial Scale (Ariva-S-mini)



ADM Settings:

Products must have the **Unit Of Measure**, **Weigh** and **Tare Weight** values set. The Tare Weight will vary depending on the size of the container.

Unit Of Measure	<input type="text" value="Pound"/>
Weigh	<input type="text" value="Yes"/>
Tare Weight	<input type="text" value="0.02"/>

Kiosk SFE must have the **Scale** value set to **Serial Port**.

Scale	<input type="text" value="Serial Port"/>
--------------	--