 


ADM Cash Out Reports

 
Completing a Cash Out on the Kiosk

When removing cash from the bill acceptor on a V5 MicroMarket, the employee should select the **Cash Out** button in the administration settings. This will allow for accurate reporting on when cash was removed from the kiosk and will appear in the Cash Audit Report in ADM.

1. After cash is withdrawn, tap the **logo** in the top left corner of the kiosk **Home** screen. The **Pin Entry** screen will display.

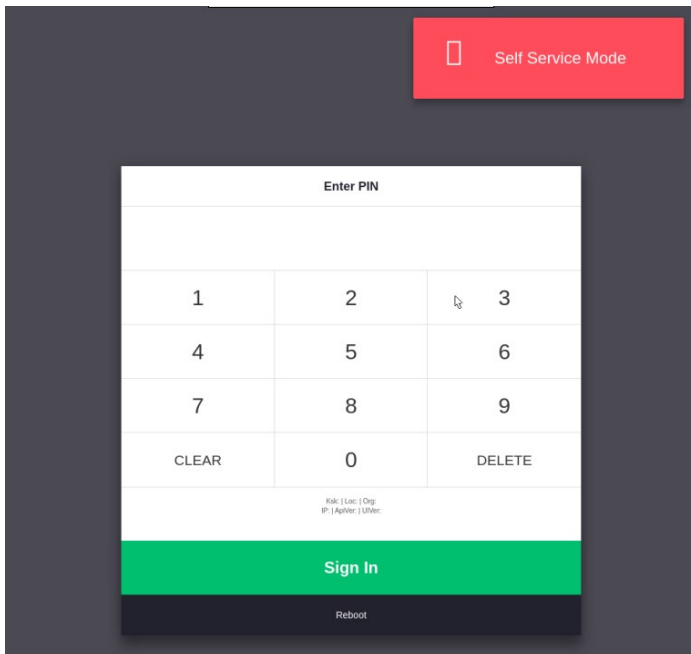

2. Enter the **PIN** associated with the account and tap **Sign In**.
3. Select **Cash Out** from the drop-down menu.
4. Select the **Cash Out** button.

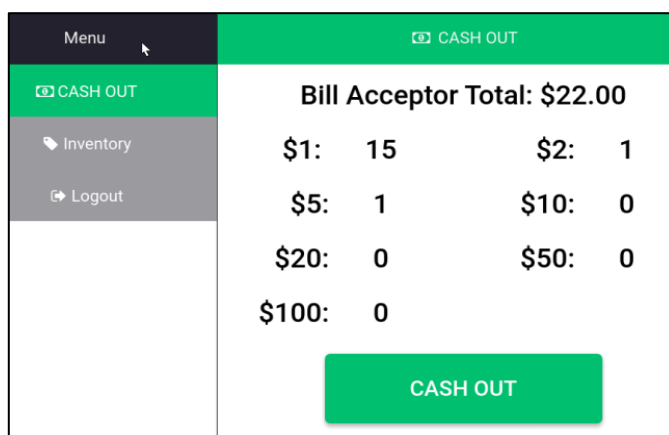

5. Select **Logout** to return to the Point-of-Sale screen.