LightSpeed Pick line Layout Guide

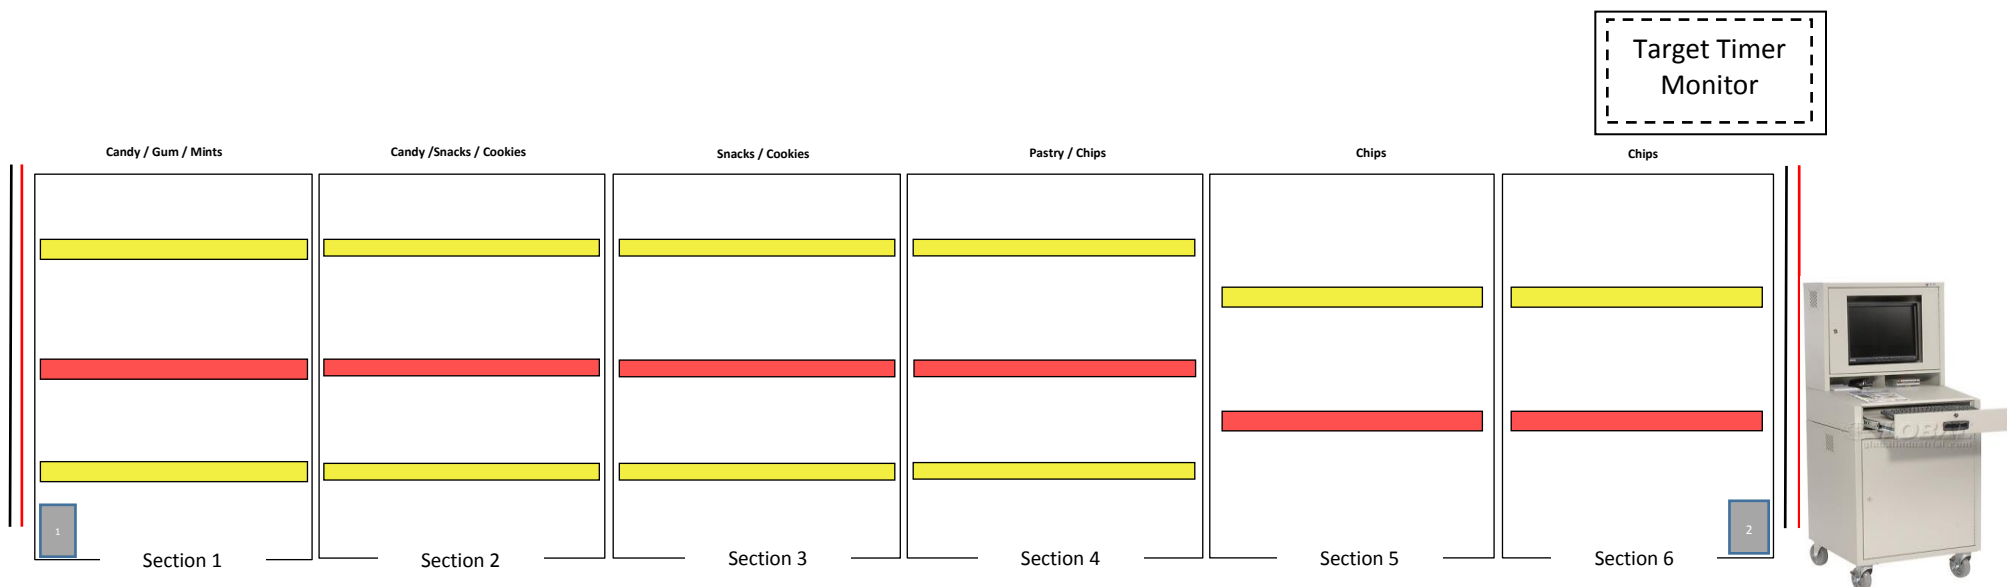| Candy / Gum / Mints	Candy /Snacks / Cookies	Snacks / Cookies	Pastry / Chips	Chips	Chips
Section 1	Section 2	Section 3	Section 4	Section 5	Section 6

───── Power and Ethernet drop **(Attached at both ends of the carton flow racks)**

Lights: Verify you have the same amount of products for the total amount of lights purchased. **(100 lights = 100 individual SKU's)**

Complete Light: 1 – This is the light that will print out your tote tags for the bins **(You cannot assign a product to this light)**

Gateway(s): 2 – These devices power the line **(power and data drop [Ethernet] is needed at the beginning and end of the line <u>attached</u> to your rack)**

Gateway 1: (Mounted at the start of your pick line) will power the first 3-4 sections (50 – Product 60 SKU's)

Gateway 2: (Mounted at the end of your pick line) will power the last sections (50 – 60 Product SKU's)

Target Timer Monitor – Will be mounted at the very end above the last section. It will be connected to the computer within the work station.

Work Station – Will have the FastTrack Controller Computer / Tote Tag Light (Order Completed light) / Tote Tag Printer (Epson wired)

How to place product (Pick line Plan-O-Gram):

- You **higher selling products** should be placed in the middle of your shelves. (Best as possible)
  - o (This prevents your pickers from bending or reaching for items that are frequent on most orders, picking will stay consistent within arm's reach)
- The **slower selling products** should be place at the bottom and top of your shelves. (Best as possible)
  - o (This will help with products you do not pick as frequently)