



Fixed mount assembly instruction

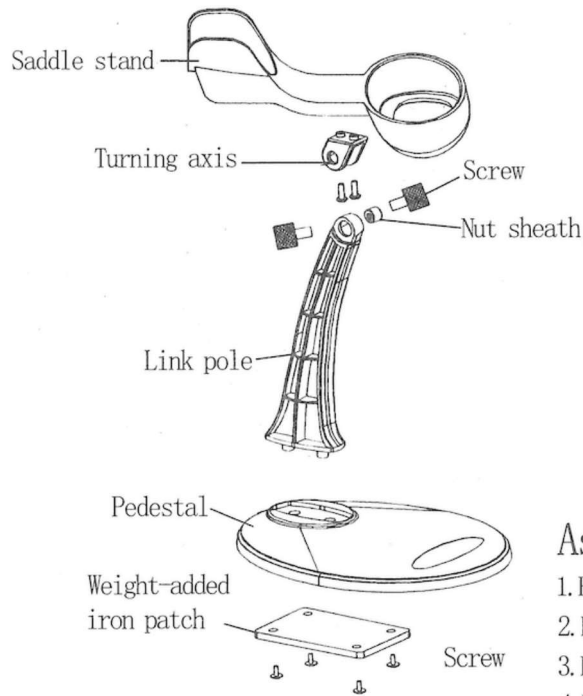

Assembly steps:

1. Fix the turning axis and the saddle stand
2. Link the mat patch and the link pole
3. Fix the link pole and pedestal
4. Lock the weight-added iron patch

Fixed mount assembly instruction

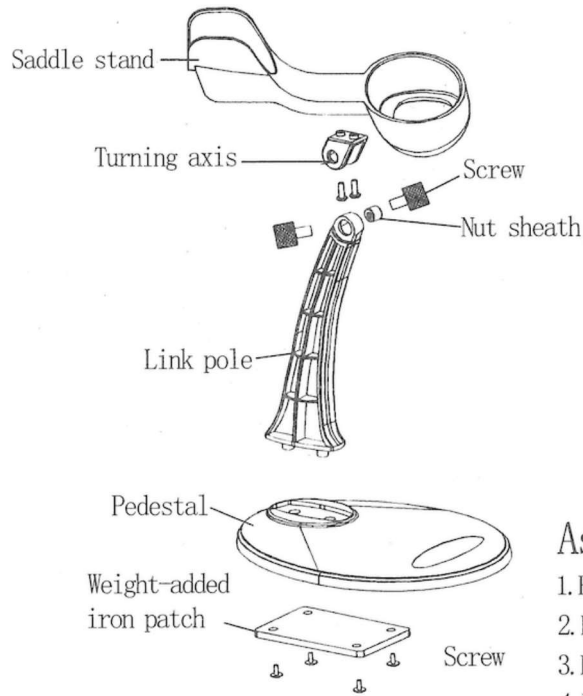

Assembly steps:

1. Fix the turning axis and the saddle stand
2. Link the mat patch and the link pole
3. Fix the link pole and pedestal
4. Lock the weight-added iron patch

SCANNERS ARE PRECONFIGURED TO WORK PROPERLY RIGHT OUT OF THE BOX

However, if you ever have a problem with a scanner, you can restore the settings they had when they were shipped to you by following the simple instructions below.

THE IMPULSEPOINT TWO STEP SCANNER SETUP PROCESS

STEP1: SCAN THIS

RESET CONFIGURATION TO DEFAULTS



STEP 2: SCAN THIS

EXPAND UPC-E TO UPC-A ENABLE



YOUR SCANNER IS NOW READY TO BE TESTED

- Open a blank Word document or Notepad file.
- Click in an area that accepts typing.
- Find an item in your store with the short 8-digit barcode.
- Scan the barcode. The scanner should produce a 12 digit UPC Code.

SCANNERS ARE PRECONFIGURED TO WORK PROPERLY RIGHT OUT OF THE BOX

However, if you ever have a problem with a scanner, you can restore the settings they had when they were shipped to you by following the simple instructions below.

THE IMPULSEPOINT TWO STEP SCANNER SETUP PROCESS

STEP1: SCAN THIS

RESET CONFIGURATION TO DEFAULTS



STEP 2: SCAN THIS

EXPAND UPC-E TO UPC-A ENABLE



YOUR SCANNER IS NOW READY TO BE TESTED

- Open a blank Word document or Notepad file.
- Click in an area that accepts typing.
- Find an item in your store with the short 8-digit barcode.
- Scan the barcode. The scanner should produce a 12 digit UPC Code.