



**PicoMarket
International Assembly
Instructions**

Tools Needed:

- #1 philips screwdriver
- 1/8" hex driver
- Antenna bolt tool




Hardware Bag Contents:

- Four (4) M3 x 5mm screws
- One (1) plastic split wire loom





Step 1

Remove the back cover of the stand by removing four screws with the hex driver.

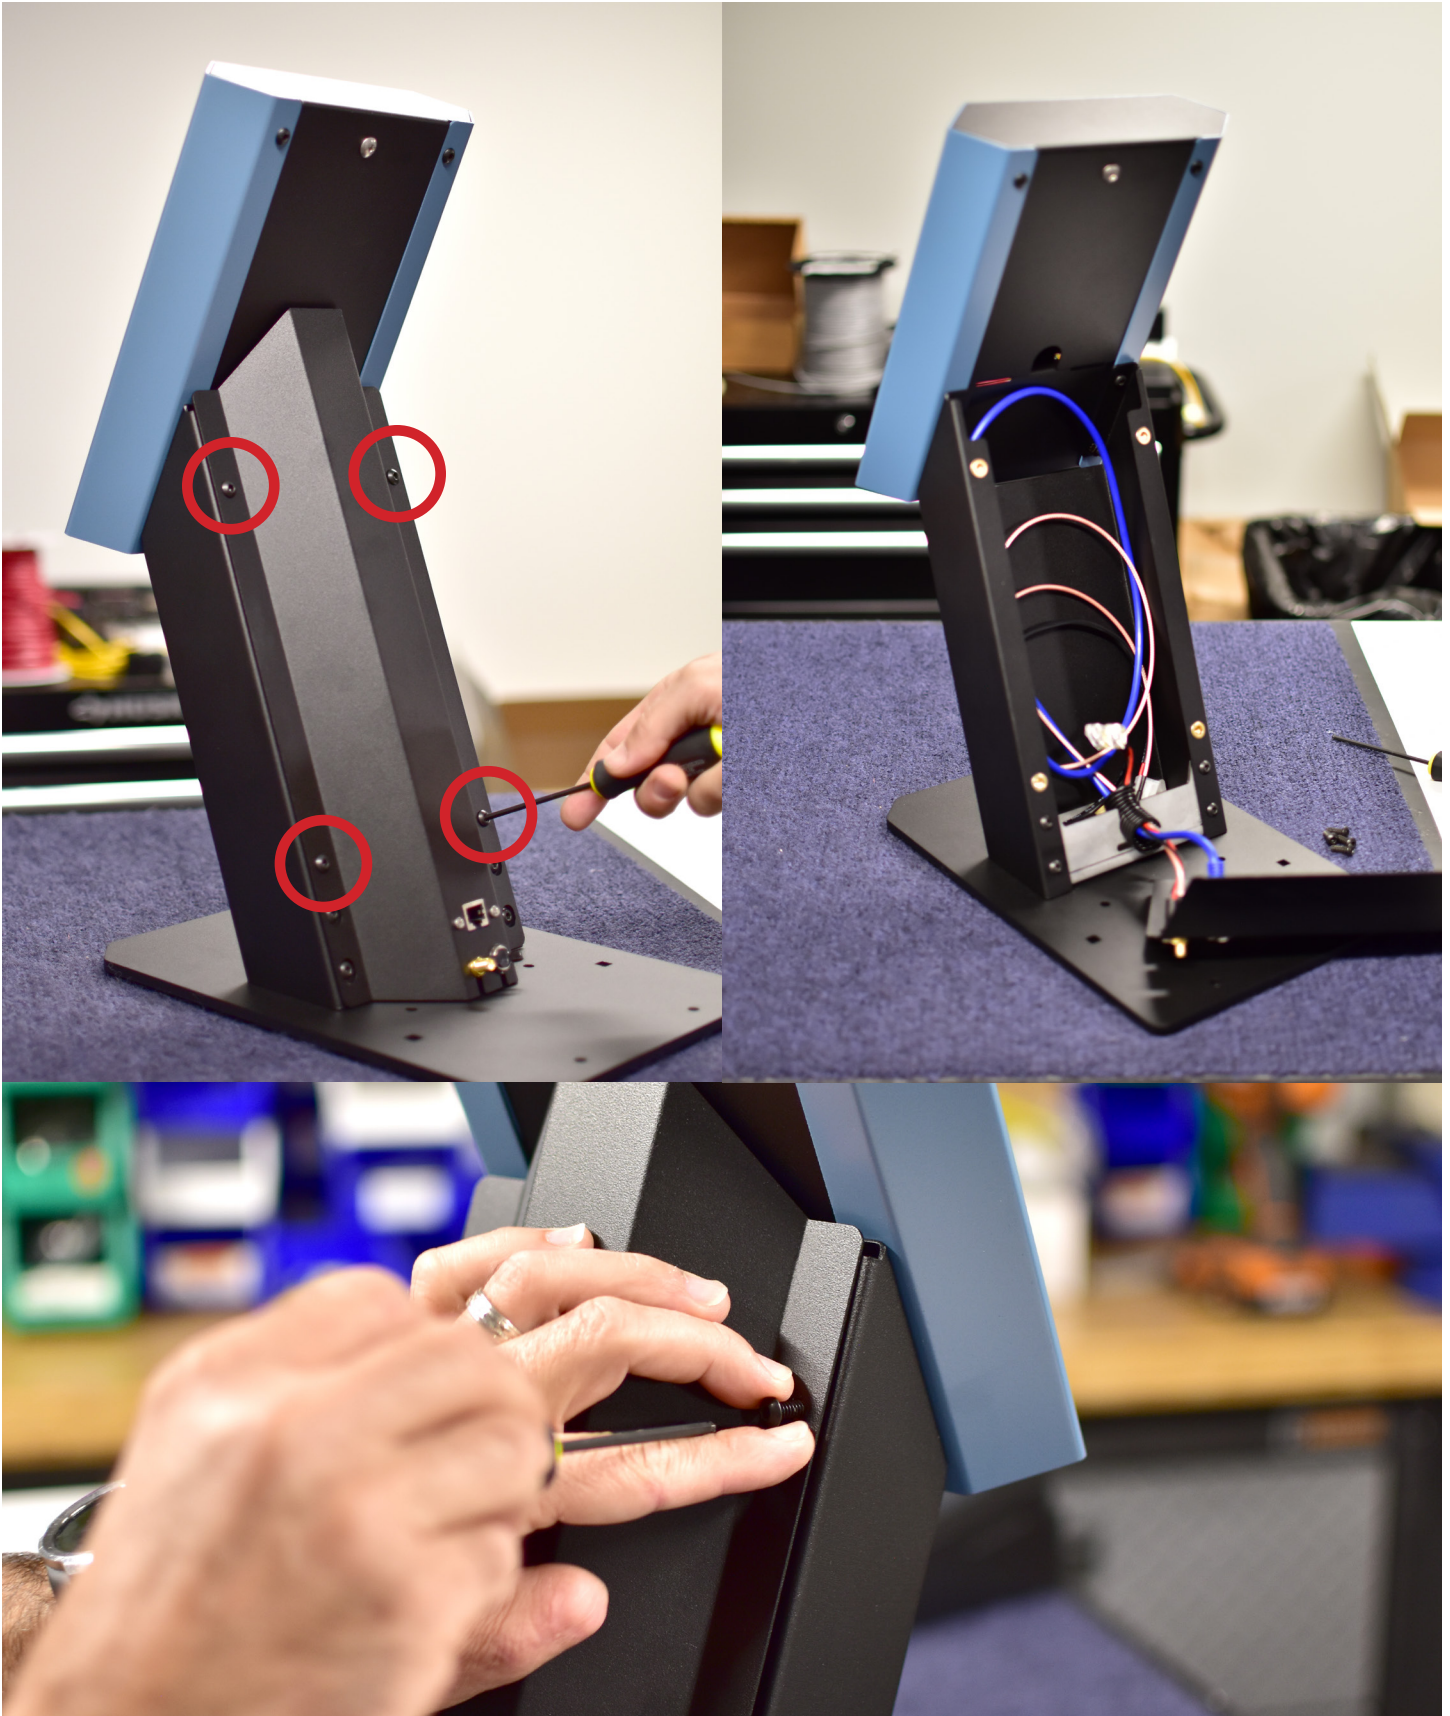

Step 2

Remove the cover from the PicoMarket housing by removing the philips screw.

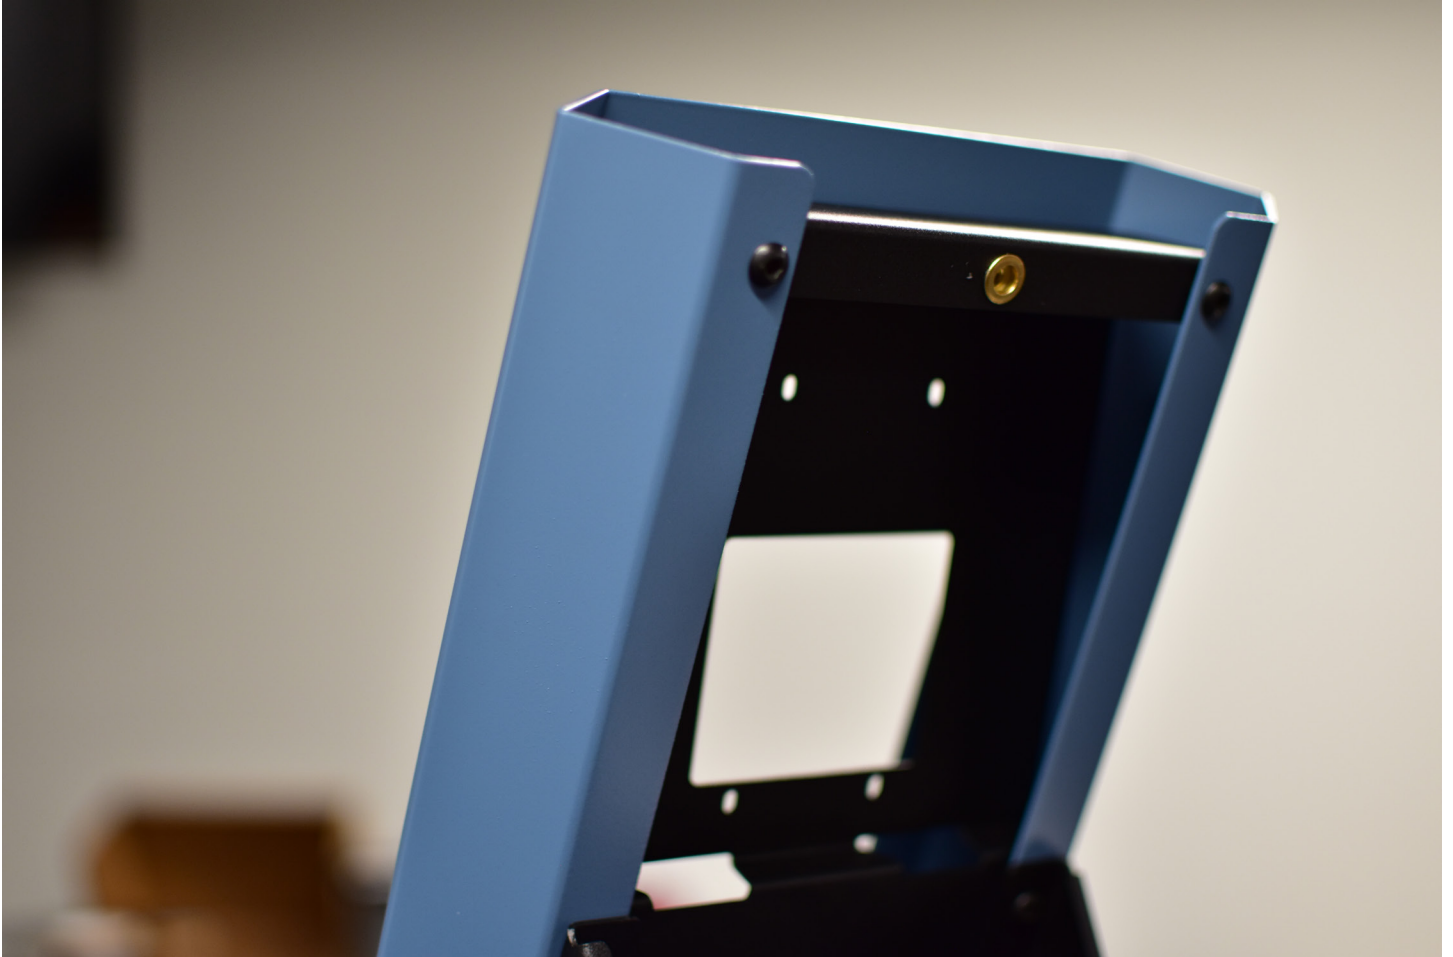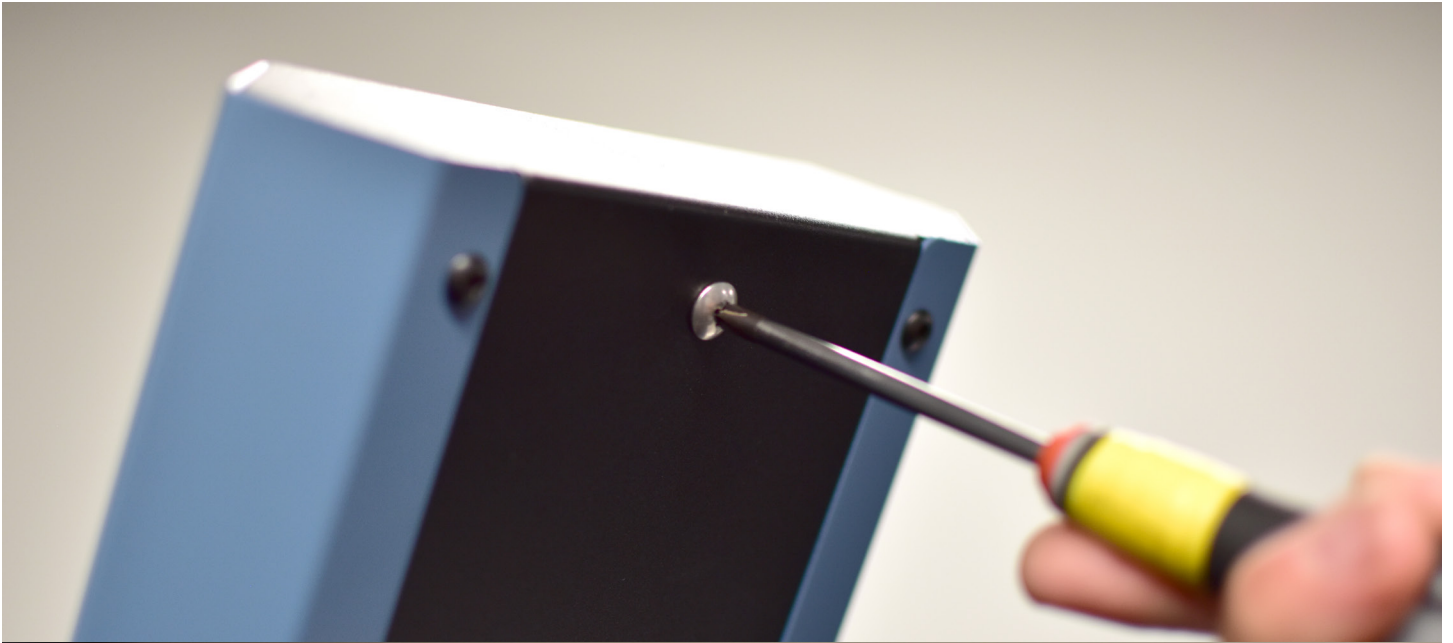


Step 3

Place the PicoMarket into the slot on the front of the stand.



Step 4

Install the four M3 screws to secure the PicoMarket to the stand.

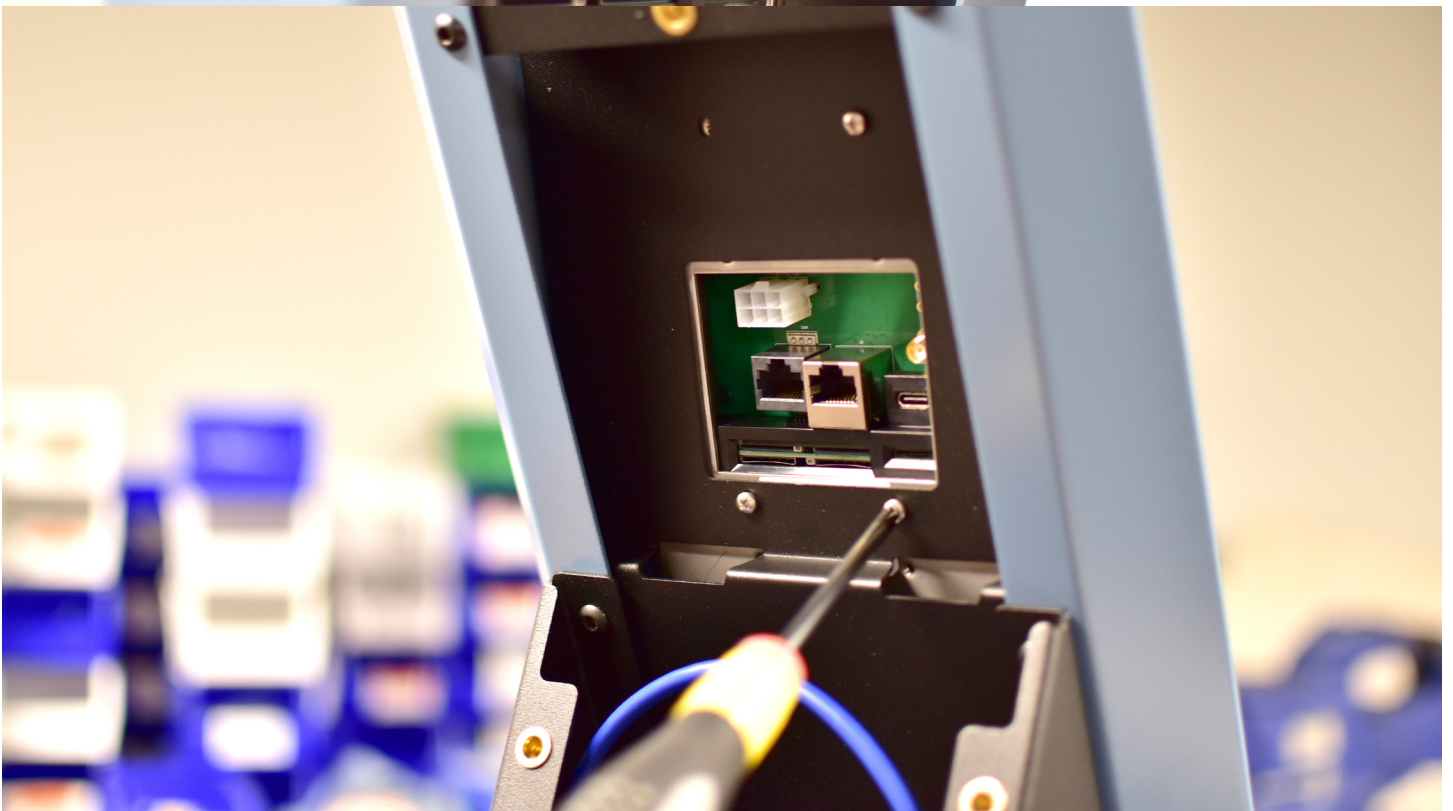

Step 5

Plug the molex power cable into the PicoMarket.



Step 6

Plug the Ethernet cable into the Ethernet port.


NOTE: Ensure you are plugging the Ethernet cable into the correct port. Failure to do so will result in a lack of network connectivity if you choose to use Ethernet.



Step 7

Use the antenna tool to screw in the mini coax antenna cable.

NOTE: At this point, you may wish to test the PicoMarket by plugging in the power cable to ensure all functionality before closing the cables up.

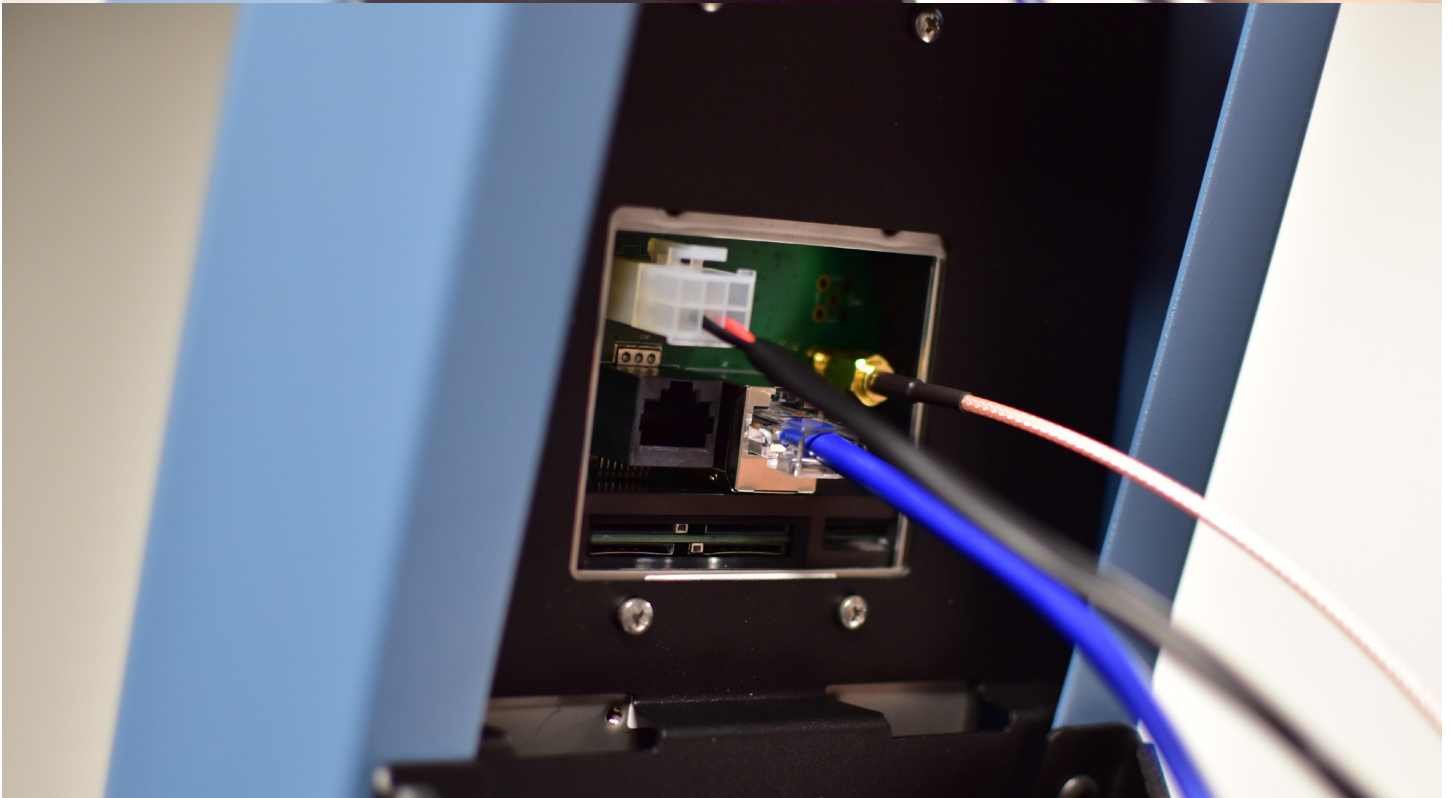


Step 8

Fit the wire loom over the cables.



Step 9

Reinstall the PicoMarket backplate and insert the philips screw.

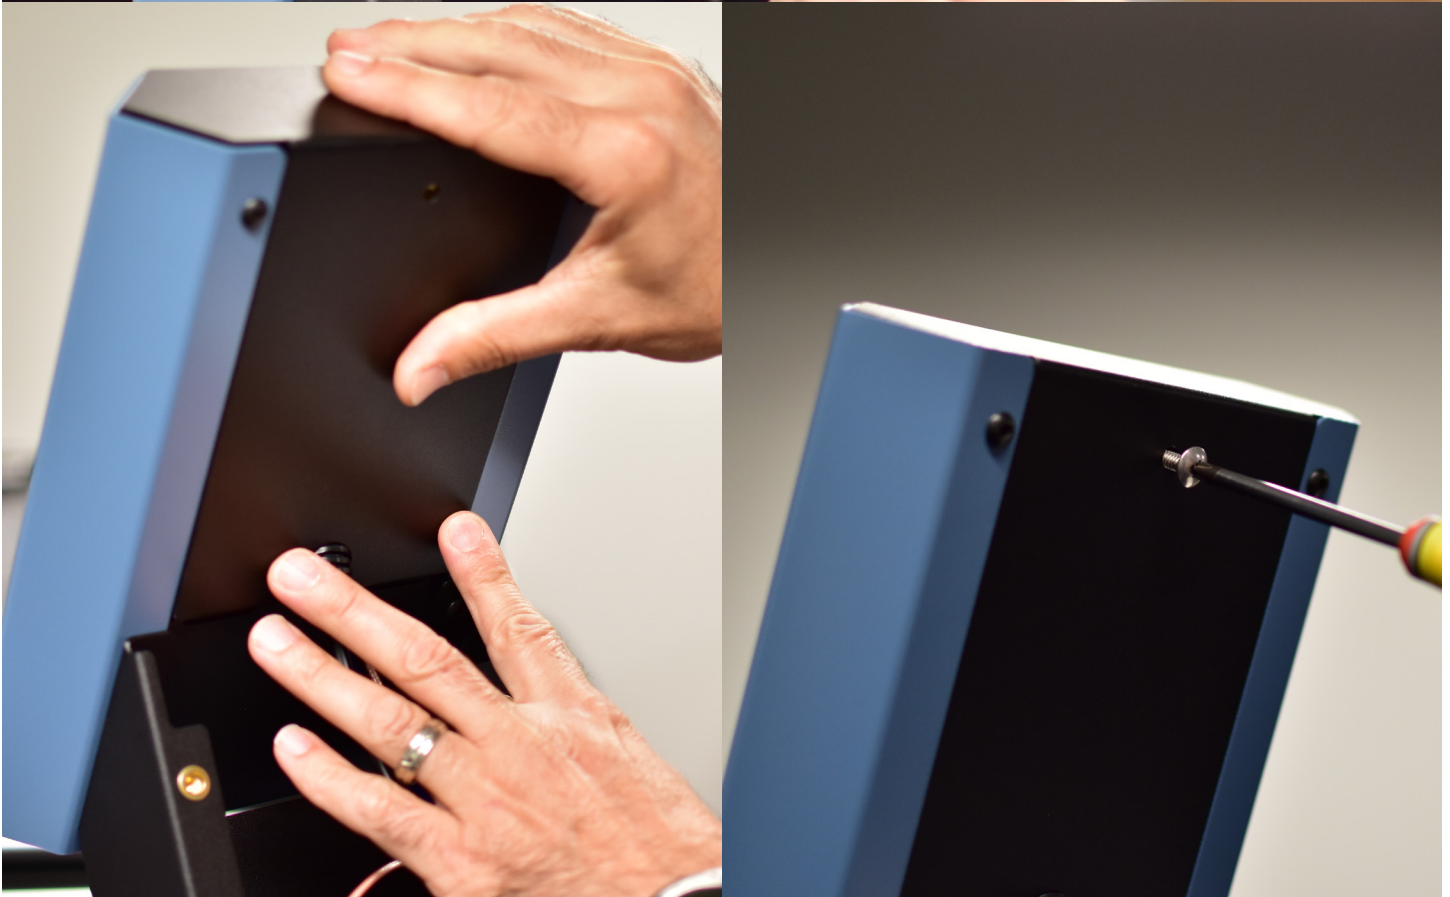

Step 10

Ensure all cables are tucked inside the PicoMarket stand and reinstall stand backplate and screws.

